


SH056

INCLINE/SHOULDER SMITH PRESS

OWNER'S MANUAL

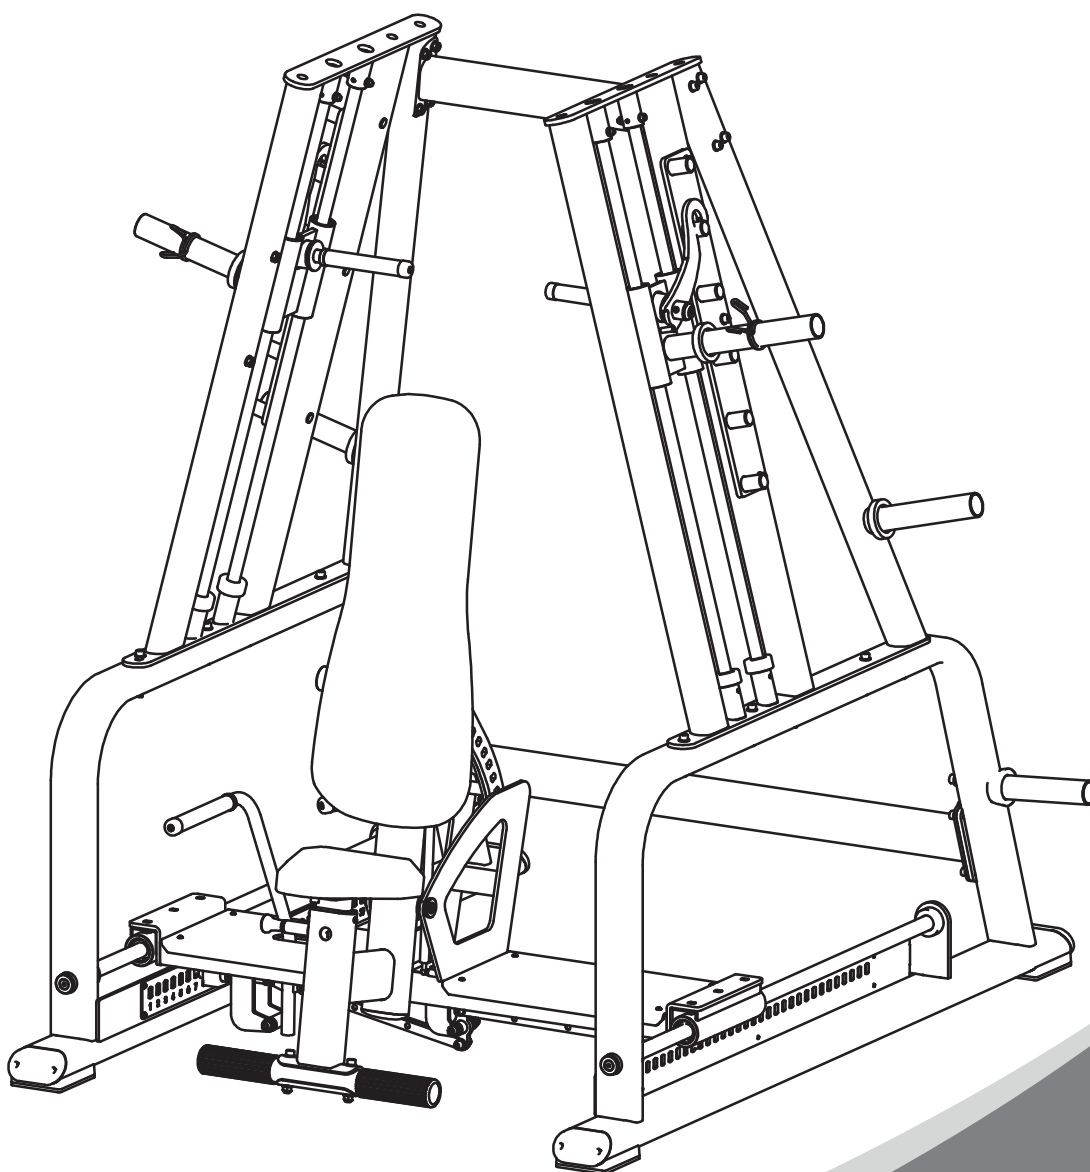

! CAUTION

Read all precautions
and instructions in this manual
before using this equipment

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

Important Safety Instructions----- 3

Instructions----- 4

Parts List----- 5

Exploded View----- 7

Measurement Guide----- 8

Assembly Instructions----- 9

Assembly----- 10

Maintenance Schedule----- 15

General Maintenance Information----- 16

Weight Training Tips----- 17

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:


1. Read all instructions before using the equipment.
These instructions are written to ensure your safety and to protect the unit.
2. Use the equipment only for its intended purpose as described in this guide.
Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
3. The product should only be used on a level surface and is with 0.5 meters space around the product.
Do not use the equipment outdoors.
4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.
Teenagers should use this equipment with adult supervision.
5. Do not overexert yourself or work to exhaustion.
Do not attempt to lift more weight than you can control safely.
If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
6. This equipment is not used as medical apparatus and instruments.
7. Never operate the unit when it has been dropped or damaged.
Never drop or insert anything into any opening in the equipment.
Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
8. Be careful when getting on or off the equipment.
9. Wear proper exercise clothing and shoes for your workout, no loose clothing.

Instructions


Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

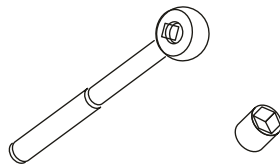


Ratchet Wrench and Socket

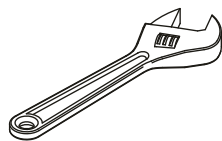


Adjustable Wrench

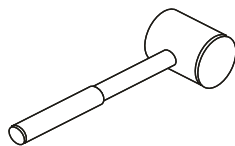

Rubber Mallet



Hex Key Wrench Set

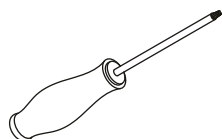

Phillips Screwdriver

Parts List

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED.


Item No	Description	QTY	Item No	Description	QTY
1	Left side stand	1	29	Longitudinal guide rod	2
2	Right side stand	1	30	rotary shaft $\phi 25.4 \times 130 \times M1$	1
3	Left tower leg	1	31	Pin shaft $\phi 18.2 \times 95$	2
4	Right tower leg	1	32	Pin shaft $\phi 18.2 \times \phi 10.2 \times 173$	1
5	Left sliding rack	1	33	Washer $\phi 16 \times \phi 5 \times 2$	2
6	Right sliding rack	1	34	Air spring	1
7	Left suspension frame	1	35	Cushion	1
8	Right hook bracket	1	36	Barbell plate bar	2
9	Lower connecting frame	1	37	Footrest	1
10	Upper connecting frame	1	38	Rubber Foot	3
11	Limit frame	2	39	Adjustable Stopper	1
12	Scaffold handle;	2	40	End CapPT60 $\times$ 120 $\times$ 2.5	4
13	Slider Rack1	1	41	pipe plug $\phi 25 \times 4.0$	2
14	Back cushion support	1	42	pipe plugF38	2
15	Seat cushion adjustment frame	1	43	Plug RT50 $\times$ 100	2
16	Fixed rack	1	44	Bumper	4
17	Back cushion adjustment frame	1	45	Rubber mat $\phi 75 \times \phi 48 \times 30$	2
18	Slider handle bracket	1	46	cushion $\Phi 55 \times \Phi 31 \times 20$	4
19	Connecting frame	1	47	Rubber mat $\phi 55 \times \phi 25 \times 26$	4
20	Crosshead	2	48	Rubber Sleeve	2
21	Power rack	2	49	glovesST $\phi 30 \times \phi 37 \times 180$	2
22	Slider Rack2	2	50	glovesST $\phi 24 \times \phi 31 \times 315$	1
23	Left guard rail;	1	51	gloves $\phi 24 \times \phi 31 \times 140$	1
24	Right guard rail;	1	52	hollow tube sheathRT50 $\times$ 100- $\square 30 \times 70$	2
25	left cover plate	1	53	Spacer $\phi 17 \times 10.5$	2
26	Right cover plate	1	54	Back Pad	1
27	Scratch-proof board	1	55	Long elastic pin	1
28	Longitudinal guide rod	4	56	Spring $\phi 1.5 \times \phi 13.5 \times 51$	3

Parts List


NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED.

Item No	Description	QTY	Item No	Description	QTY
57	Lock nutM20×1.5×18	3	84	Soket Head Cap Screw M8×20	1
58	chain link;	2	85	Soket Head Cap Screw M8×55	4
59	Sleeve $\phi 25 \times \phi 12.2 \times 13$	4	86	Soket Head Cap Screw M8×60	1
60	Bronze bearings $\phi 38 \times \phi 25.4 \times 18$	2	87	Socket Head Cap Screw M10×20	8
61	Small liner $\phi 16 \times \phi 8 \times 8$	2	88	Socket Head Cap Screw M10×25	16
62	Reed Nut M5	8	89	Socket Head Cap Screw M10×35	4
63	Aluminum end cap $\phi 32.5 \times 7$	2	90	Socket Head Cap Screw M10×65	4
64	Aluminum plug plate $\phi 42.9 \times 6$	6	91	Socket Head Cap Screw M10×70	8
65	Aluminum cap $\phi 39.5 \times \phi 32.8 \times 19$	2	92	Socket Head Cap Screw M10×75	10
66	Aluminum cap $\phi 32.5 \times \phi 26 \times 19$	2	93	Socket Head Cap Screw M12×30	4
67	End cover $\phi 38 \times 6$	6	94	Socket Head Cap Screw M12×90	2
68	Snap Spring $\phi 48$	2	95	Socket Head Cap Screw M5×10	8
69	Aluminum retaining ring $\phi 47 \times \phi 33.5 \times 19$	2	96	Button Head Cap Screw M6×10	12
70	Aluminum retaining ring $\phi 40 \times \phi 26.8 \times 19$	2	97	Button Head Cap Screw M6×12	2
71	Linear Motion Bearing $\phi 40 \times \phi 25 \times 58$	8	98	Flat Head Cap Screw M6×30	2
72	Linear Motion Bearing $\phi 47 \times \phi 30 \times 68$	4	99	Flat Head Cap Screw M6×16	2
73	Bearing6005-2Z	4	100	Flat Head Cap Screw M10×20	2
74	Circlips for Hole $\phi 40$	8	101	Flat Head Cap Screw M10×30	6
75	Circlips for Hole $\phi 47$	4	102	Socket Set Screw M5×6	8
76	Flat Washer $\phi 4.5 \times \phi 9 \times 0.8$	4	103	Socket Set Screw	2
77	Flat Washer $\phi 9 \times \phi 16 \times 1.6$	11	104	Socket Set Screw M8×6	10
78	Flat Washer $\phi 11 \times \phi 20 \times 2$	68	105	Cross Recess Head Screw M5×60	8
79	Flat Washer $\phi 13.5 \times \phi 24 \times 2.5$	8	106	Nylon Lock Nut M4	2
80	Spring Washer $\phi 10$	28	107	Nylon Lock Nut M8	6
81	Soket Head Cap Screw M4×25	2	108	Nylon Lock Nut M10	18
82	Soket Head Cap Screw M6×15	2	109	Nylon Lock Nut M12	2
83	Soket Head Cap Screw M8×15	2	110	Hex Nut M6	2


Exploded View

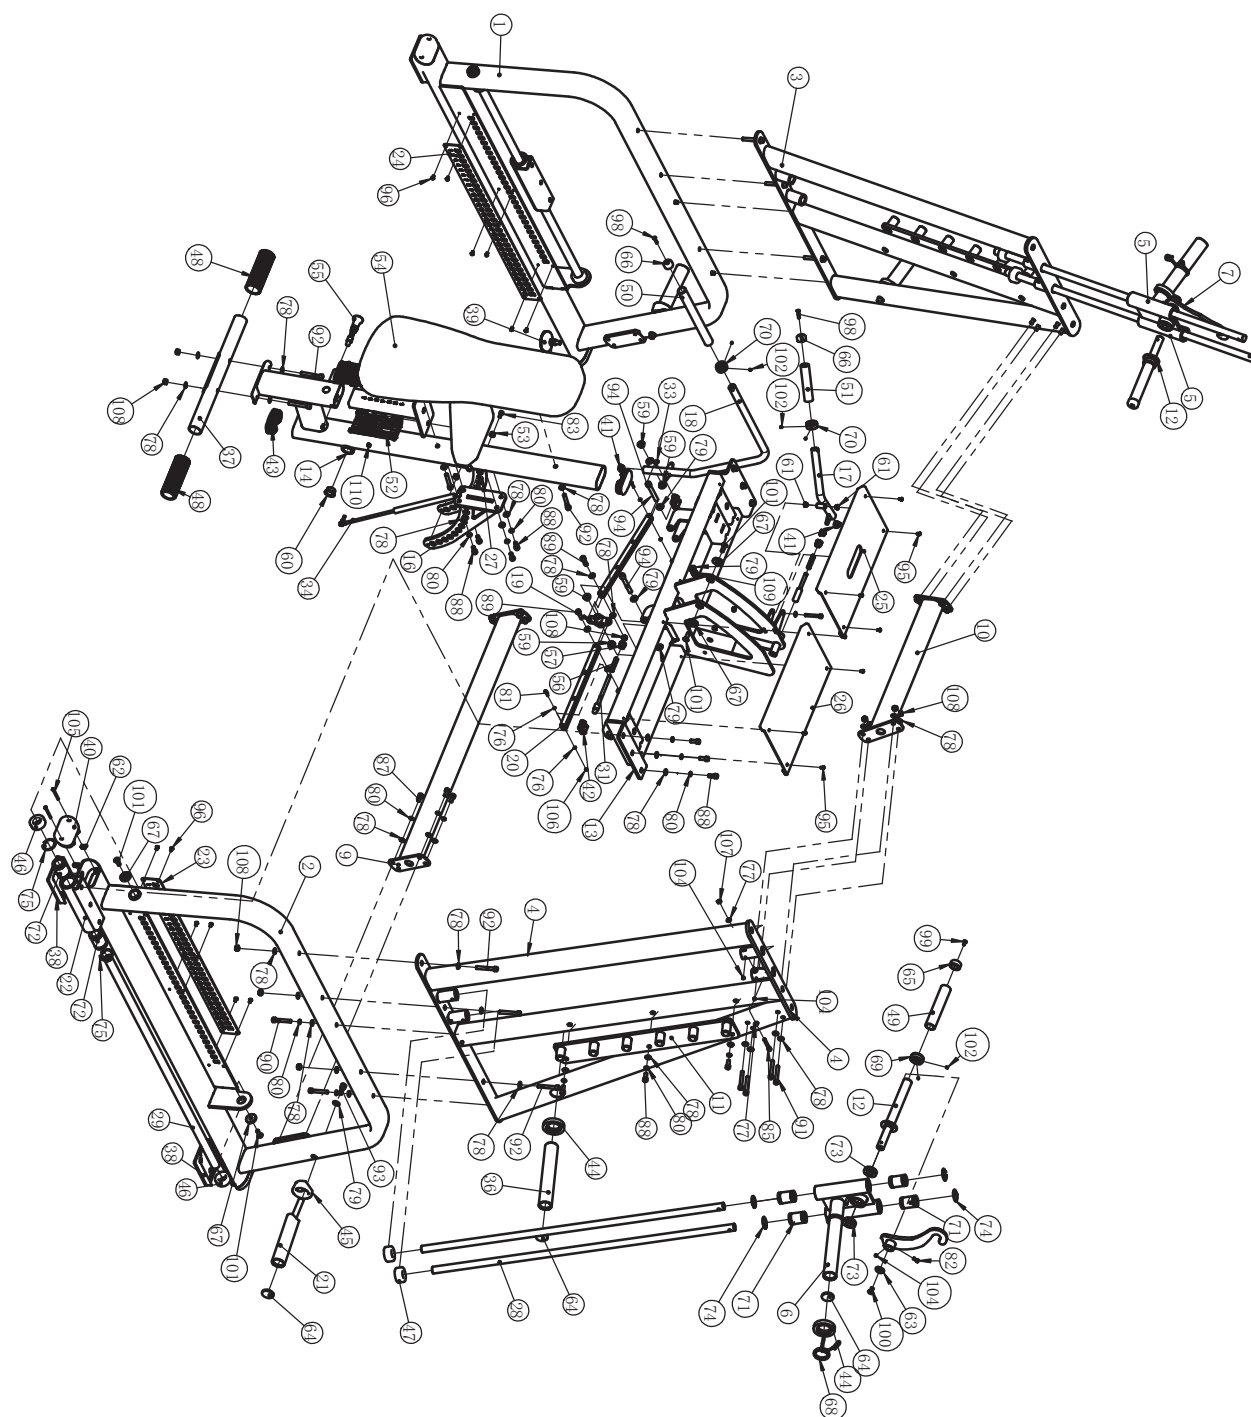


Measurement Guide

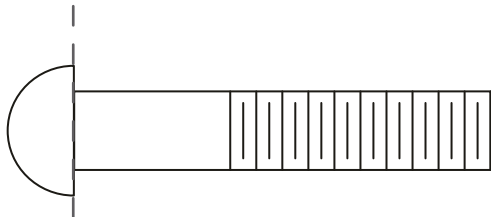


BHCS = Button Head Cap Screw

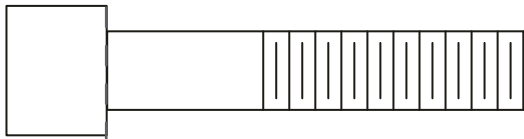


SHCS = Socket Head Cap Screw

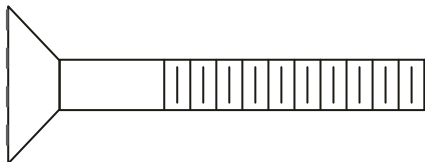

FHCS = Flat Head Cap Screw

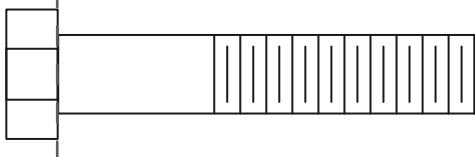

HHB = Hex Head Bolt

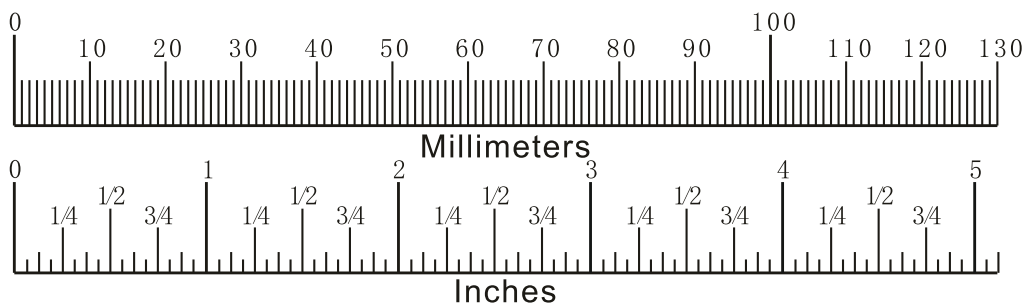

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.


NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Assembly

STEP 1


Item No	Description	QTY	Item No	Description	QTY
1	Left side stand	1	78	Flat Washer $\phi 11 \times \phi 20 \times 2$	14
2	Right side stand	1	80	Spring Washer $\phi 10$	14
9	Lower connecting frame	1	87	Socket Head Cap Screw M10 $\times$ 20	8
13	Slider Rack1	1	88	Socket Head Cap Screw M10 $\times$ 25	6
22	Slider Rack2	2			

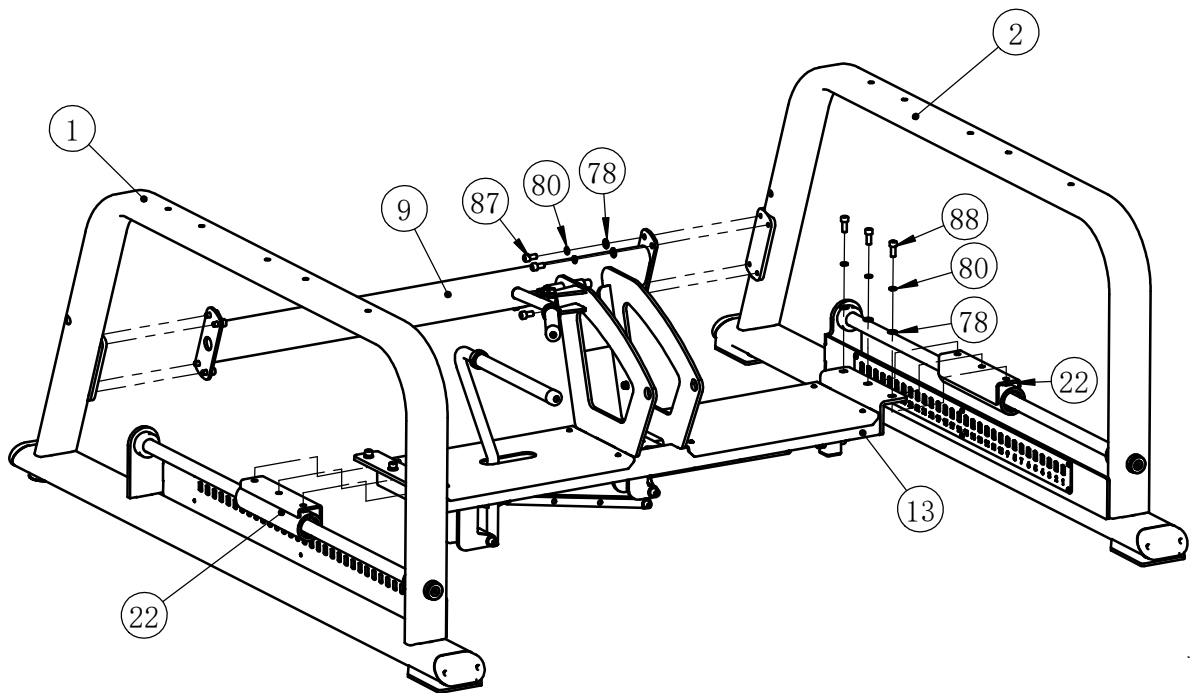

Assembly

STEP 2


Item No	Description	QTY	Item No	Description	QTY
14	Back cushion support	1	78	Flat Washer $\phi 11 \times \phi 20 \times 2$	4
16	Fixed rack	1	80	Spring Washer $\phi 10$	4
34	Air spring	1	88	Socket Head Cap Screw M10 $\times$ 25	4
77	Flat Washer $\phi 9 \times \phi 16 \times 1.6$	1	107	Nylon Lock Nut M8	1

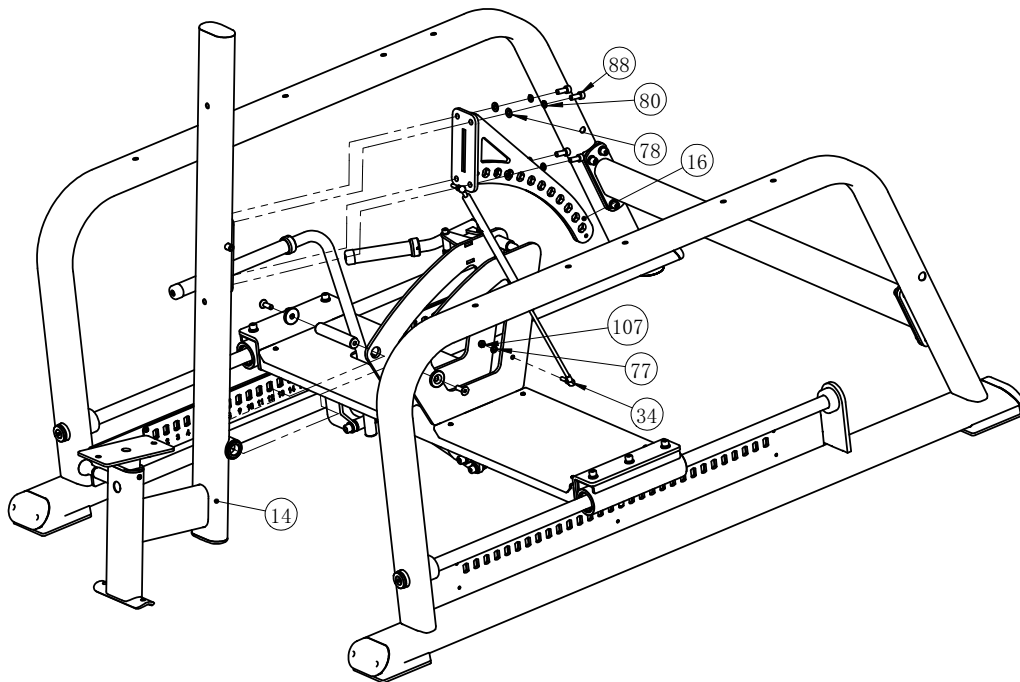

Assembly

STEP 3


Item No	Description	QTY	Item No	Description	QTY
3	Left tower leg	1	90	Socket Head Cap Screw M10×65	4
4	Right tower leg	1	91	Socket Head Cap Screw M10×70	8
10	Upper connecting frame	1	92	Socket Head Cap Screw M10×75	6
78	Flat Washer $\phi 11 \times \phi 20 \times 2$	32	108	Nylon Lock Nut M10	14
80	Spring Washer $\phi 10$	4			

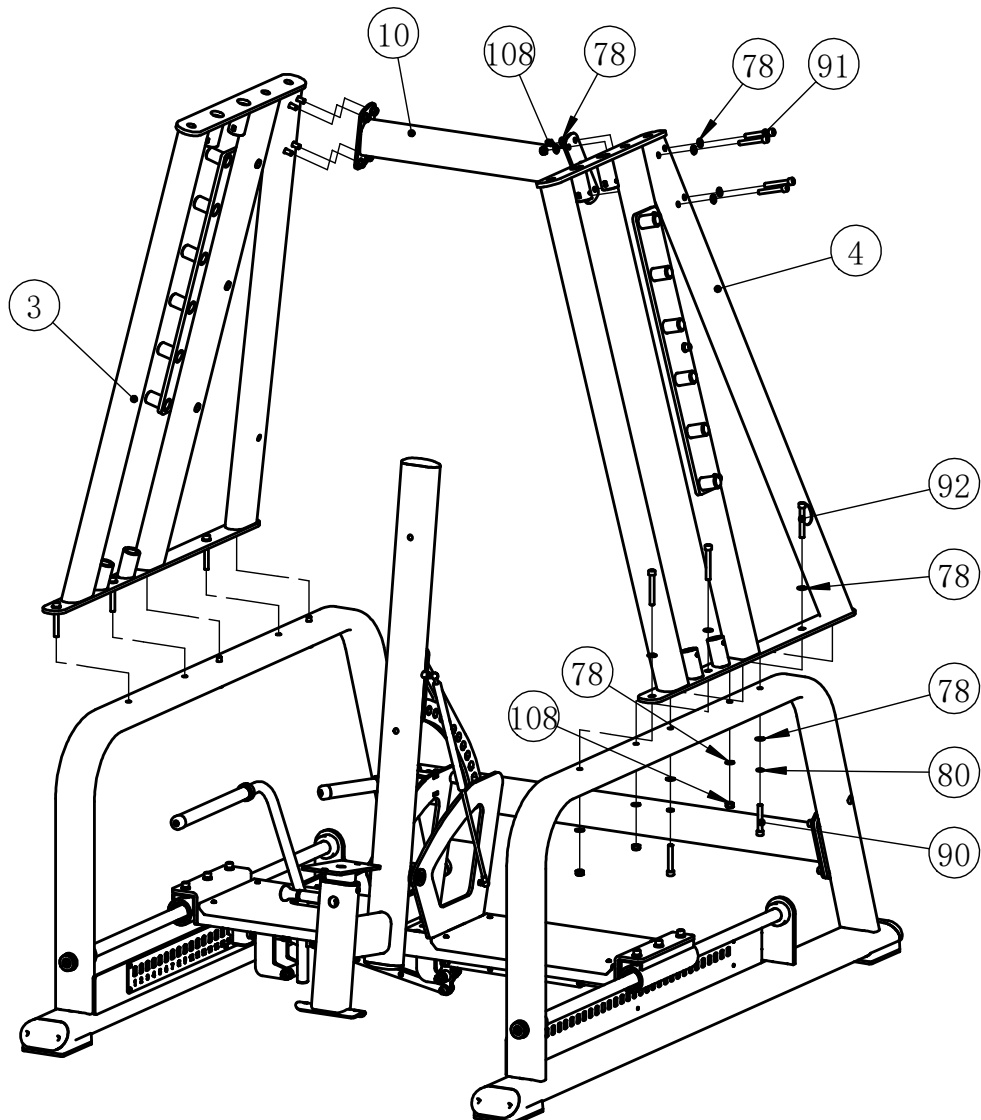

Assembly

STEP 4


Item No	Description	QTY	Item No	Description	QTY
5	Left sliding rack	1	47	Rubber mat $\phi 55 \times \phi 25 \times 26$	4
6	Right sliding rack	1	77	Flat Washer $\phi 9 \times \phi 16 \times 1.6$	8
21	Power rack	2	79	Flat Washer $\phi 13.5 \times \phi 24 \times 2.5$	4
28	Longitudinal guide rod	4	85	Socket Head Cap Screw M8 $\times$ 55	4
36	Barbell plate bar	2	93	Socket Head Cap Screw M12 $\times$ 30	4
44	Bumper	2	107	Nylon Lock Nut M8	4
45	Rubber mat $\phi 75 \times \phi 48 \times 30$	2			

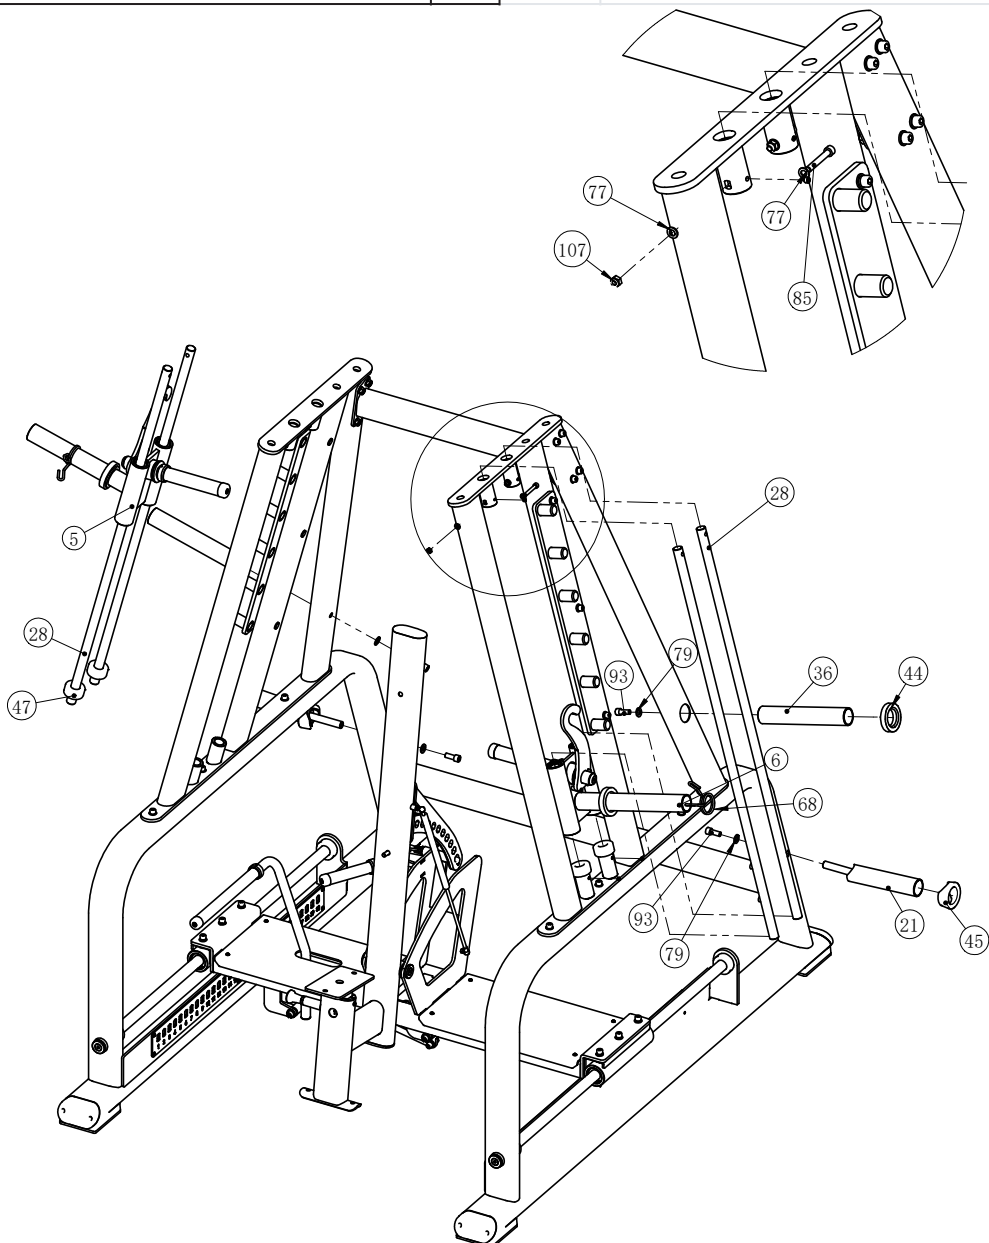

Assembly

STEP 5

Item No	Description	QTY	Item No	Description	QTY
35	Cushion	1	78	Flat Washer $\phi 11 \times \phi 20 \times 2$	6
37	Footrest	1	92	Socket Head Cap Screw M10 $\times$ 75	4
54	Back Pad	1	108	Nylon Lock Nut M10	2

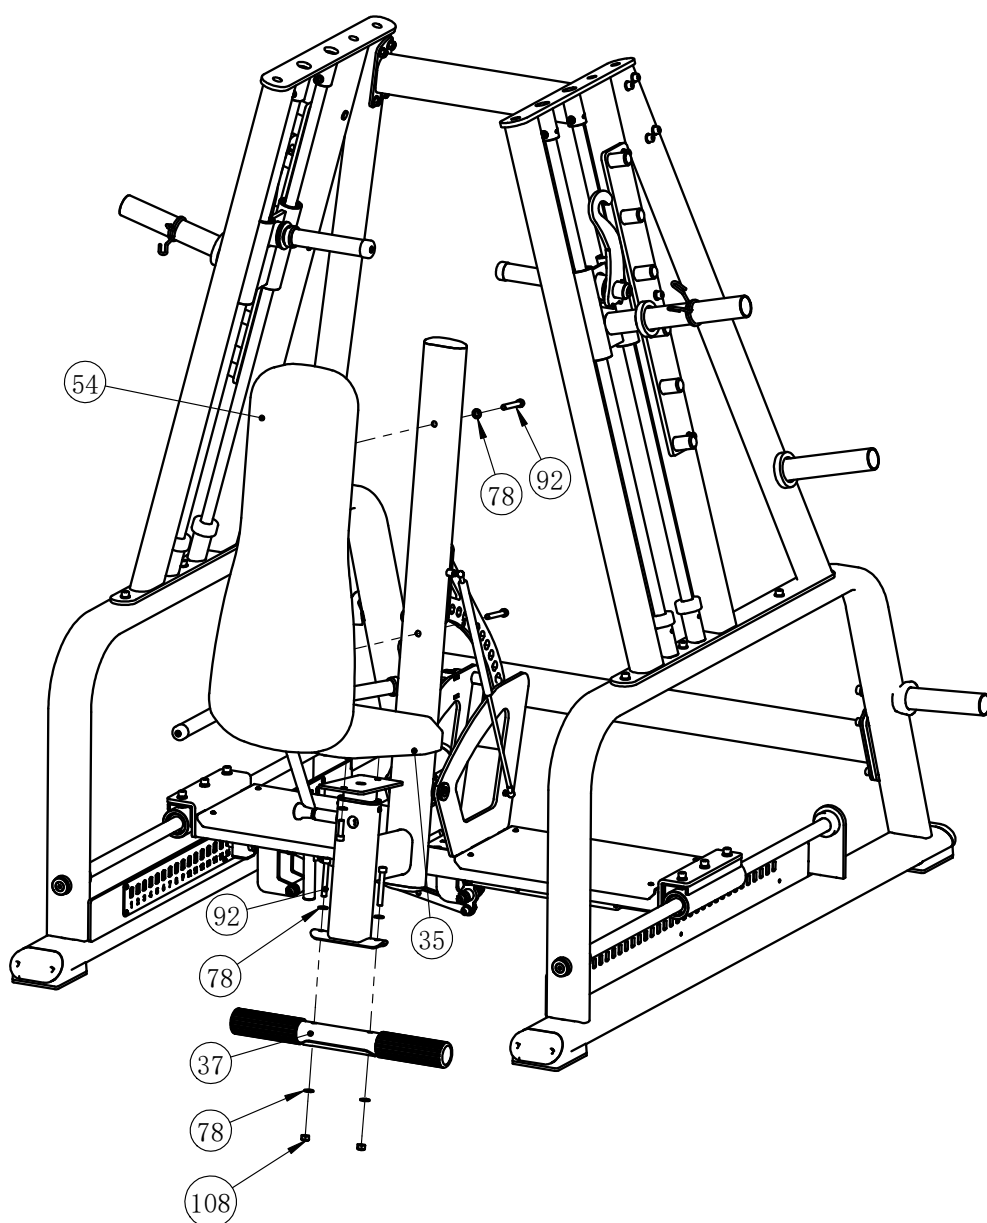

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or worn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

- * Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned properly.

Anti-Skid Surfaces:

- * These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We use only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolt attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- * Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

